


# DECT IP Phone W73P



Quick Start Guide (V1.0)

# W73P Package Contents

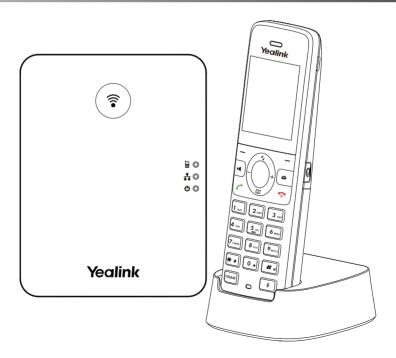



W70B Base Station 2 Power Adapters





Base Stand

Charging Cradle



Ethernet Cable

W73H Handset



Battery Cover

Rechargeable

Batterv



Belt Clip




Quick Start Guide

Note: Yealink W73P DECT IP phone consists of one W70B base station and one W73H handset.

### Assembling the DECT Phone

1. Connect the base station power and the network using method a or method b.

- a. AC Power Option
- b. PoE (Power over Ethernet) Option

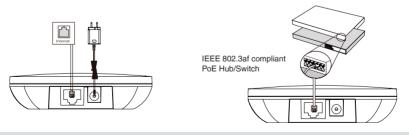



### Note:

- If you choose method a, use Yealink supplied power adapter (5V/0.6A). A third-party power adapter may damage the base station.
- If you choose method b, you do not need to connect the power adapter. Make sure the hub/switch is PoEcompliant.

### 2a. (Desktop Installation) Attach and remove the base stand.

Attach the Base Stand

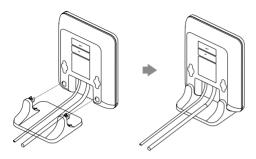

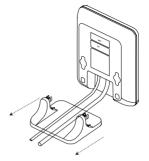


**Remove the Base Stand** 

Align the snap-fits with the corresponding holes and push forward, snapping them into the holes.

Remove the snap-fits from the holes horizontally.


# 2b. (Wall-Mount Installation) Attach the base station.

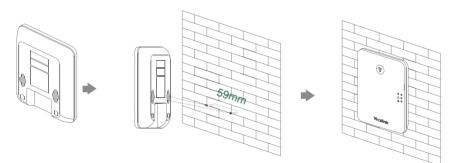


# 3. Insert the battery into the handset.




4. Attach the belt clip to the handset.

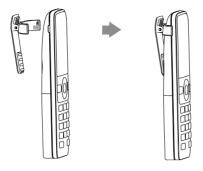

# 5. (Optional) Mount the charging cradle to the wall.

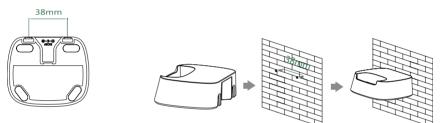


6. Connect the charging cradle and charge the handset.



### Note:

- Use Yealink-supplied power adapter (5V/0.6A). A third-party power adapter may damage the handset.
- Check the charging status on the top-right corner of the LCD screen.

# **Hardware Component Instructions**

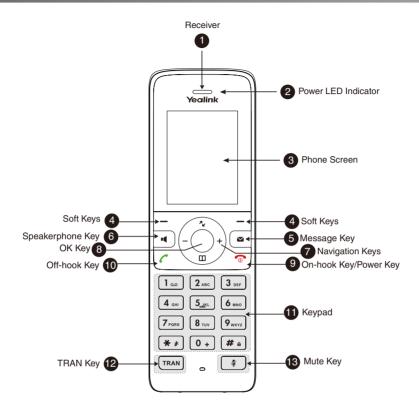

### Regulatory Notices

Operating Ambient Temperatures Operating temperature: +14 to 122°E (-10 to 50°C)

Relative humidity: 5% to 90%, nonco

Storage temperature: -22 to +158°F (-30 to +70°C)

#### Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc. arising from the use of this product

#### Explanation of the symbols

DC symbol

- is the DC voltage symbol
- WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic

equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of

WEEE as unsorted municipal waste and have to collect such WEEE separately

#### Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the EU BoHS Directive. Statements of compliance can be obtained by contacting support@yealink.com

#### Safety Instructions

Save these instructions. Read these safety instructions before use!

#### General Requirements

Before you install and use the device, read the safety instructions carefully and observe the situation during operation.

- During the process of storage, transportation, and operation, please always keep the device dry and FCC Statement clean, avoid collision and crash Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the
- appointed maintenance center for repair
- respected as well

### Environmental Requirements

- · Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Prace the device at a wein-vertifiated prace. Do not expose the device under direct sumight.
  Keep the device dry and free of dusts.
  Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made.

Keen the device away from any heat source or bare fire, such as a candle or an electric heater

### Operating Requirements

- Do not let a child operate the device without guidance.
- Do not let a child play with the device or any accessory in case of accidental swallowing.
  Please use the accessories provided or authorized by the manufacturer only.
- . The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
  Or on spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, waterbowk, kitchen sink, wet basement or near a swimming pool.
- . During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the pow plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid liahtnina strike
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from When inset is a lock of minipart of the granding and the set of the source and the set of the

- you disconnect all other cables

#### A Battery Requirements

- . Do not immerse the battery into water, which could short-circuit and damage the battery
- Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely
- bigh temperatures, which could cause the battery to explode.
  Do power the handset off before removing the battery.
- Do not try to use the battery for the power supply of any device other than this handset.
- Do not open or mutilate the battery released electrolyte is corrosive and may cause damage to your eves or skin
- Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility
- Cleaning Requirements
  - Before cleaning the device, disconnect it from the power supply.
  - Use a piece of soft, dry and anti-static cloth to clean the device
  - Keep the power plug clean and dry

#### Troubleshooting

The unit cannot supply power to Yealink device

There is a bad connection with the plug

- Clean the plug with a dry cloth.
  Connect it to another wall outlet
- The usage environment is out of operating temperature range 1. Use in the operating temperature range
- The cable between the unit and the Yealink device is connected incorrectly.
- 1 Connect the cable correctly
- You cannot connect the cable properly
- You may have connected a wrong Yealink device
  - 2. Use the correct power supply Some dust, etc., may be in the port
  - 1 Clean the port

Contact your dealer or authorized service facility for any further questions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

personal management of the relevant laws and statutes while using the device. Legal rights of others should be Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

 l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.NMB-3(B)

#### **Badiation Exposure Statement**

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

#### Contact Information

YEALINK NETWORK TECHNOLOGY CO. LTD

309 3rd Eloor No 16 Yun Ding North Boad, Huli District, Xiamen City, Eulian, P.B.C. YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.

kylaan 3127, Atrium Building, 8th floor, 1077ZX Amste dam. The Netherlands

YEALINK (USA) NETWORK TECHNOLOGY CO., LTD.

999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA

Made in China

#### About Yealink

Yealink (Stock Code: 300628) is a global brand that specializes in video conferencing, voice communications and collaboration solutions with best-in-class quality, innovative technology and user-friendly experience. As one of the best providers in more than 140 countries and regions, Yealink ranks No.1 in the global market share of SIP phone shipments (Global IP Desktop Phone Growth Excellence Leadership Award Report, Frost & Sullivan, 2019).

#### Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues.



# Need more help?



Yealink Documentation& Video



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD. Web: www.yealink.com Copyright©2021 YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.All rights reserved.